


Conversion from 3 Solenoid to 1 Solenoid Vacuum System

Converting removes solenoid valves from extractor arm where they are prone to damage and creates a positive air pressure to release the battery from the left (right) cup when the selector switch is set for right (left) cup vacuum, which also blows dirt out of the vacuum line.

Parts Required

PN	Description	Qty
7963	VALVE 120VAC 1/4NPT(F) 4 WAY 2 POS SOL	1
2982	HOSE 1/4" PUSH LOCK BLUE	40 ft
2675	FITTING PUSH LOK 1/4 H X 1/4 NPT BRASS	4
8731	NAMEPLATE VACUUM CUPS	1

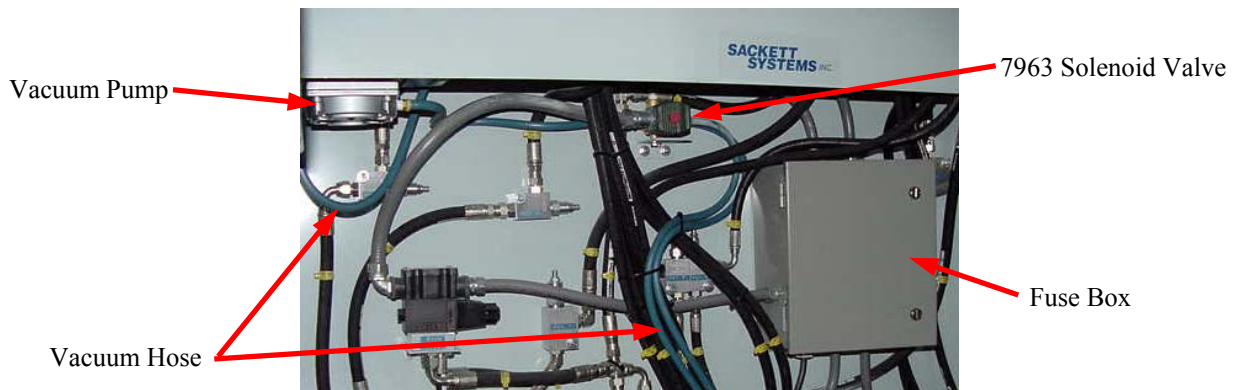

View of Operator Compartment showing solenoid valve placement

